
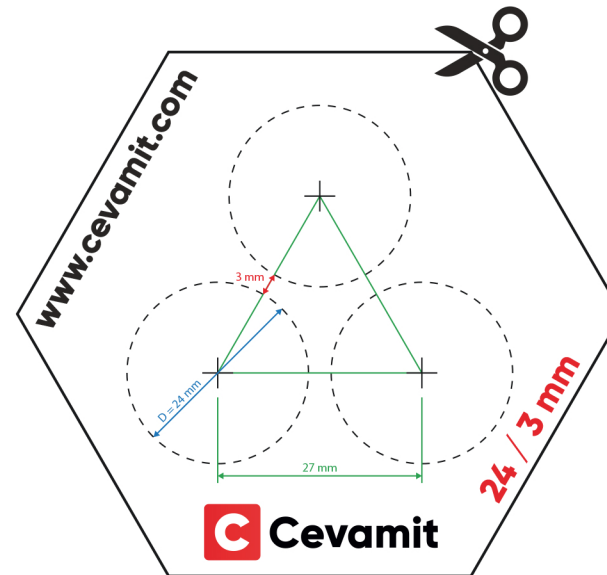
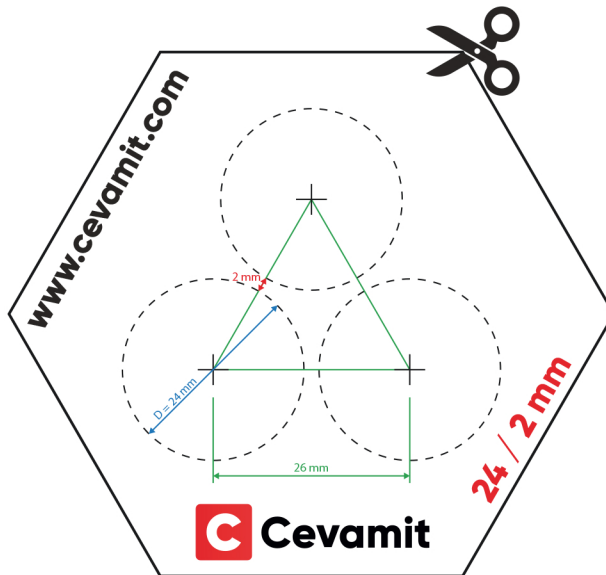
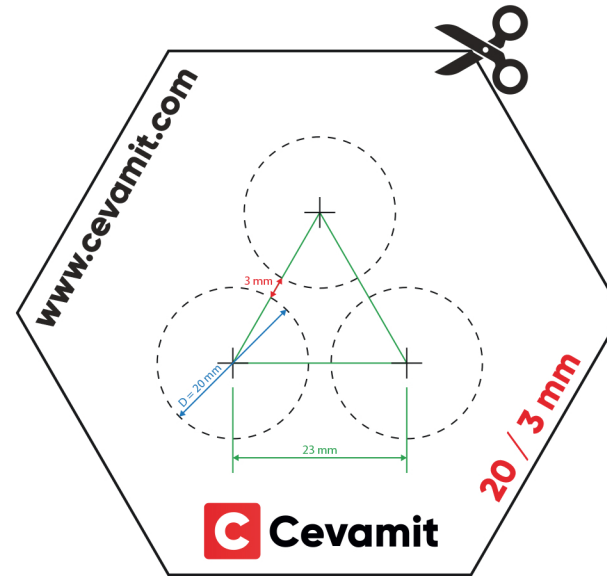


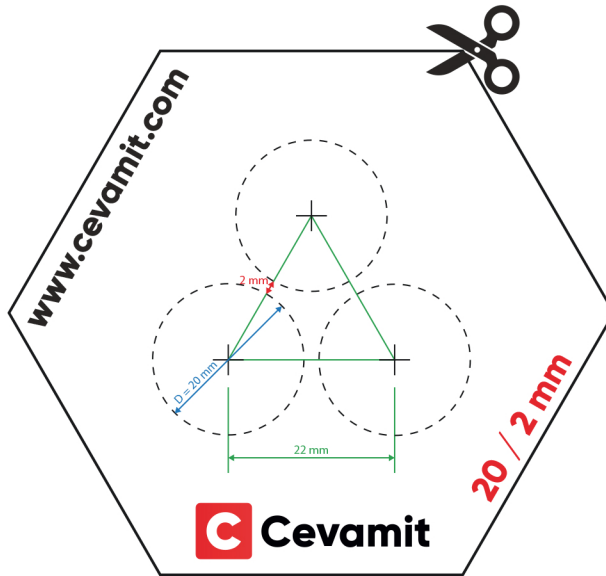

Instructions for using the drilling template for a 20/24 mm drill bit

The drilling template is used to create an opening of the correct shape and size for the installation of Cevamit.

1. Select the correct template

The attached PDF contains 4 different template patterns. Select the pattern according to the diameter of the drill bit you will be using.

2. Position the template

Cut out the selected template and place it where you want to create the opening.

3. Mark the drilling points

Using a marker or spray, mark the 3 drilling points through the template.

4. Drill 3 holes

Drill all 3 holes at the marked points.

5. Connect the holes

Using the same drill bit, gradually remove the material between the individual holes until one continuous opening matching the shape of the template is created. Concrete can then be poured into the prepared opening.

Important: The opening must have sufficient size, depth and the correct shape to ensure that Cevamit can be installed correctly.

Important – printing the template

The template must be printed at a 1:1 scale and on a full page. When printing, do not change the scale or size and do not use the fit-to-page option. After printing, the template must correspond to the actual dimensions specified in the PDF.

